

## Water Meter and Filter Maintenance


Lot holders should regularly check and clean the meter surrounds, meter glass and the water filter located next to your meter. With pumping from our dam, the water has a small amount of silt which will block the filter without regular cleaning.

To clean your filter, turn off the main tap at your water meter, undo the grey plastic cover to reveal the water filter. Wash the filter and replace. Turn the main tap back on.

## Check that you have no leaks on your block

Turn off all taps on your block. With the main tap on, check your water meter. It should not be advancing. If it is you may have a leak.

## How Our System Works

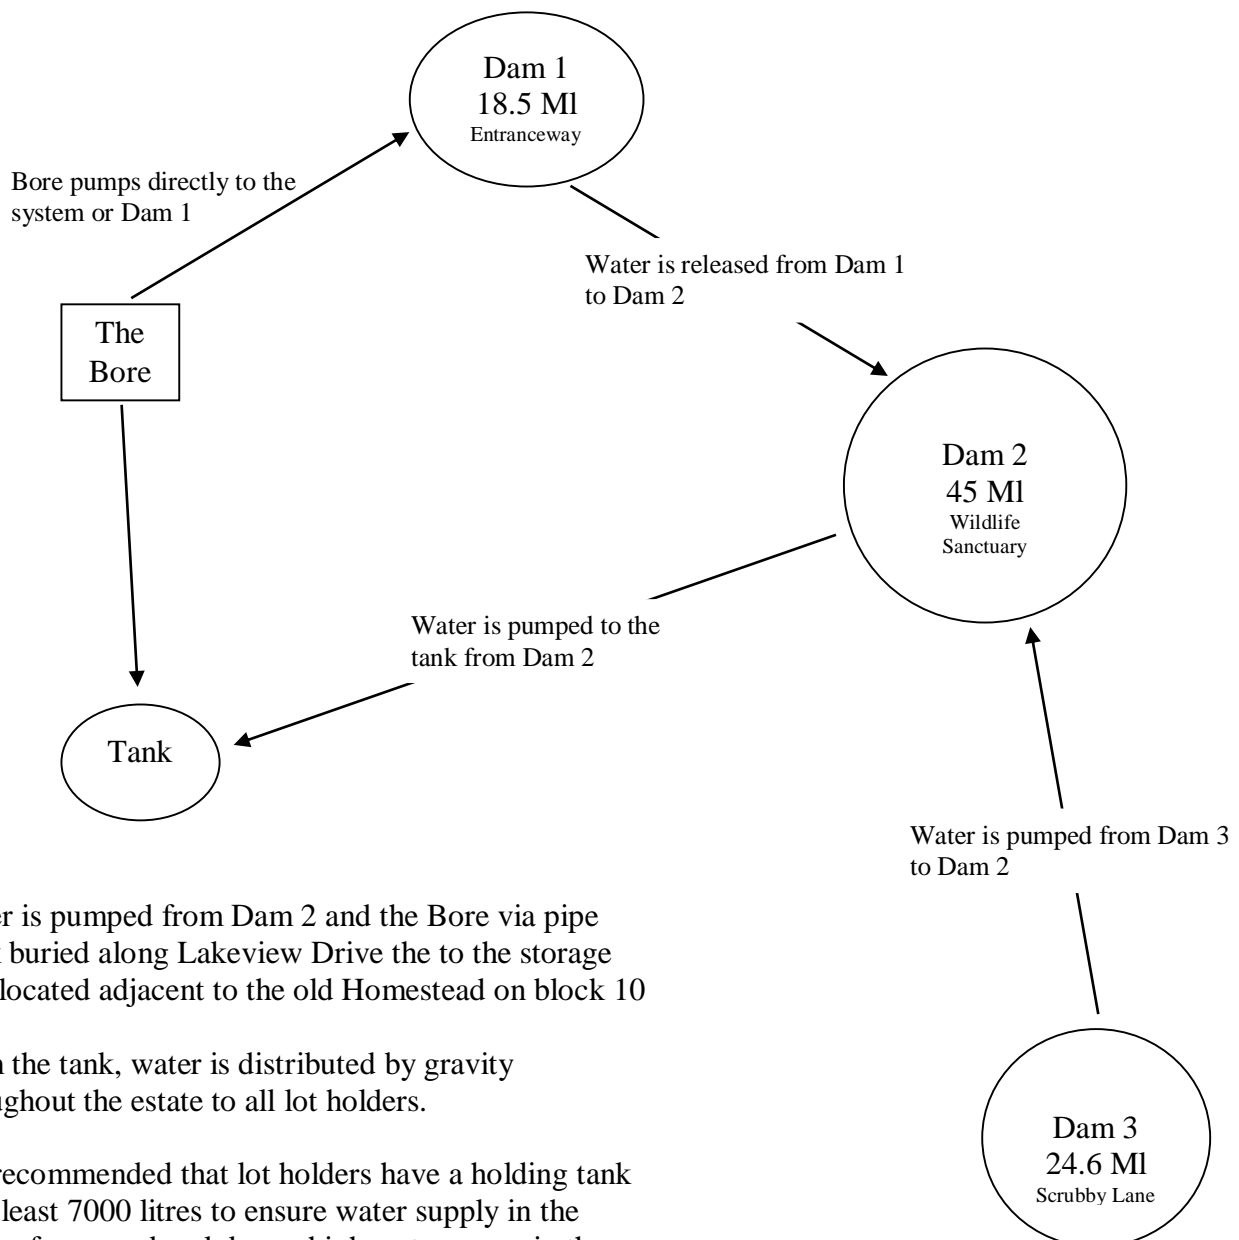

Water is pumped from Dam 2 and the Bore via pipe work buried along Lakeview Drive to the storage tank located adjacent to the old Homestead on block 10

From the tank, water is distributed by gravity throughout the estate to all lot holders.

It is recommended that lot holders have a holding tank of at least 7000 litres to ensure water supply in the event of a pump breakdown, high water usage in the Estate or a broken pipe in your area.